

MOVETIME Family Watch

Quick Start Guide



alcatel

Getting to know your watch





Power key

- Long press for 3s to power on/off.
- Long press for 10s to force restart.
 Short press to go back to
- Short press to go back to Home screen. Press again to turn off the screen.

SOS key

- Long press for 5s to make an SOS call.
- Short press to go back to previous screen.

Note:


- · Press any key to wake up the device.
- Swipe right to go back to previous screen.
- Do not remove the screws. Otherwise, it may damage the device.



Setting up your watch

Getting a SIM card


A nano-SIM (not included) is required in order to set up and use your watch. Contact your network operator to request a nano-SIM with a voice and data plan.

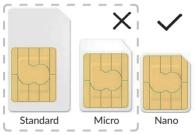

Inserting the SIM card


Refer to the following steps when inserting your SIM card. (1)

1. Remove the strap.

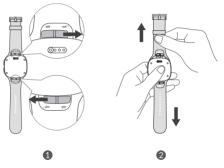


⁽¹⁾ Do not let children install/remove the watch strap or SIM card without supervision.


2. Remove the SIM card cover and insert the SIM card.

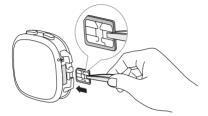

 $3. \;\; \text{Push the SIM card softly using a tweezer and replace the cover.}$

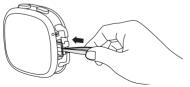

4. Replace the strap.

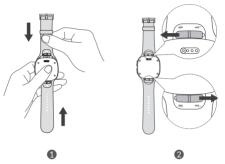


Charging your Watch

 Ensure that the pins in the charging dock are aligned with the pins on the back of your watch.



2. Using a USB cable, connect the charging dock to either a computer or USB power adapter to begin charging.

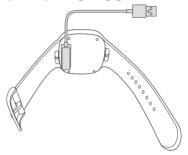

Powering on/off your watch

Long press the **Power key** for 3 seconds to power on/off your watch.

Language

You will be asked to select the system language when powering on your watch for the first time. To change the system language when the watch is unpaired, swipe right 2 times from the Home screen and select a language.



Download and install the app on your smartphone

To download the app you can:

- Search for "TCLMOVE" in the Google Play store (Android 4.3 and above), or App store (iOS 8.0 and above).
- · Scan the following QR code.



Creating and logging in to your account

Touch ${\bf Sign}~{\bf up}$ to create your TCLMOVE account and enter your email address and password to log in.





Pairing

Make sure the SIM card is correctly inserted and internet is connected before pairing your watch with your phone. \mathbf{G} , \mathbf{E} , or $\mathbf{3G}$ will appear on the left top of your watch once connected to the internet.



1. Pair your watch with your phone

There are 2 ways to pair your watch with your phone.

Scan the QR code to pair your watch
 Swipe left from the Home screen of your watch to obtain the QR code when pairing the watch for the first time.



· Enter the IMEI number to pair your watch

The IMEI number is printed on a label on the device packaging. You can also swipe left from the Home screen of your watch to obtain the IMEI number when pairing the watch for the first time. Enter the IMEI number of your MOVETIME Family Watch and touch **Confirm** to pair your watch with your phone.





A verification code will be sent to your watch and will appear on screen. Enter the verification code and touch **Confirm.**

- 2. Enter your phone number.
- Enter your relationship.

 Enter your child's name and phone number (the phone number of the SIM inserted in the watch). Complete your child's personal information (profile picture, birthday, height, etc.) and touch Done.

Your child's personal information will appear as below:



Once the MOVETIME Family Watch has been successfully paired with your phone, you will be brought to the application main screen. The location of the watch will be displayed here on the map.

Adding family member

Family members can be added using the administrator's application either manually or by scanning a QR code.

Adding a family member manually

- Touch Me on the application main screen.
- 2. Select a Family watch.
- 3. Touch Family watch contacts.
- 4. Touch Family members.
- 5. Touch and then select **Add manually**.
- Enter a name/relationship and number. You can also upload a photo (optional).
- 7. Touch Save.



Adding a family member via QR code

- 1. Touch Me on the application main screen.
- 2. Select a MOVETIME Family Watch.
- Touch Family watch contacts.
- Touch Family members.
- 5. Touch and then select **Scan QR code**.
- 6. A QR code will appear on screen. If the invited family member is next to you they can scan it directly using their **TCLMOVE** app. If the invited family member is not in your vicinity, touch to send them the QR code.



Using your watch

Screen

Press the **Power key** to wake up the Home screen.



Using the touch screen

Touch

To select an application or confirm an action, use your finger to touch it.

Swipe left/right

Swipe left/right to view applications, settings, and functions.



Swipe up from the Home screen to view notifications. Swipe down from the Home screen for volume and brightness controls.

Changing the watch face

Long press the Home screen, swipe left to view different options, and touch a watch face to select it.

Call

Calling a family member or a friend

To view family contacts, swipe left from the Home screen and touch **Family** or **Friends**. Touch the contact to place a phone call.






Voice message

Sending a voice message

Touch Family, Friends, or Group Chat to select a contact or a group.

Hold to record, and release to send. Touch to select and send an emoji.

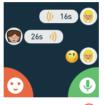

Note: If voice message or emoji fails to send, \bigcup will appear next to the message. Touch the icon to resend the message.

Friends

Adding new friends

Swipe left from the Home screen and touch **Friends.** Keep both watches in close proximity, shake them, and touch ${\bf OK}$.





Note: Up to 15 friends can be added.

Deleting a friend

Long press a friend in the contact list. Touch the Delete icon that then appears on screen. Touch \checkmark to confirm, or touch X to cancel.





Group chat

Creating a group


Add friends first before you create a group. Swipe left from the Home screen and touch **Group Chat**. Touch **Create a group**. Choose a group picture and invite friends. Touch to create a group, or touch to cancel.






Removing the SIM card

1. Open the SIM card cover, push the SIM card softly using a tweezer.

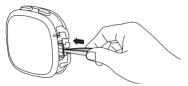

2. Take out the SIM card carefully.

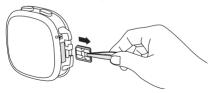

Waterproof notice

This product has an IP67 rating and is suitable for everyday use. DO NOT use it when swimming, diving, scuba diving and taking shower.









More information

For more information, please refer to the help section in the TCLMOVE app or visit www.tclcom.com/wearables/familywatch.



CJB1JM0VDAAA